

# "RFIP-R3" Data Dictionary Install - Trimble Geo XH


This 33 step document will give directions on how to install the Trimble Data Dictionary "**RFIP-R3**" onto your Geo XH data logger and then delete the old Data Dictionary. We will also show how to enable the "**Repeat**" function for the dialog boxes inside of TerraSync as well as installing the new "**RFIPConfig-R2**" data logger configuration file and make sure it is loaded.

## **Step 1**

Save your new "**RFIP-R3**" Data Dictionary onto your computer in the following directory:


**C:\AAWork\PFDATA\RFIP**

as shown in this screen.

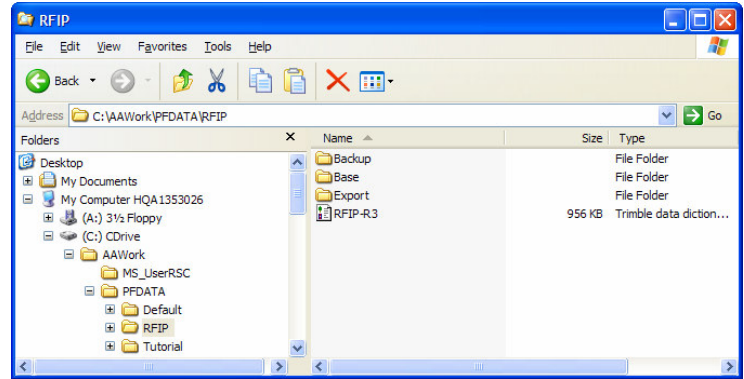

## **Step 2**

Connect your data logger to office PC using ActiveSync.

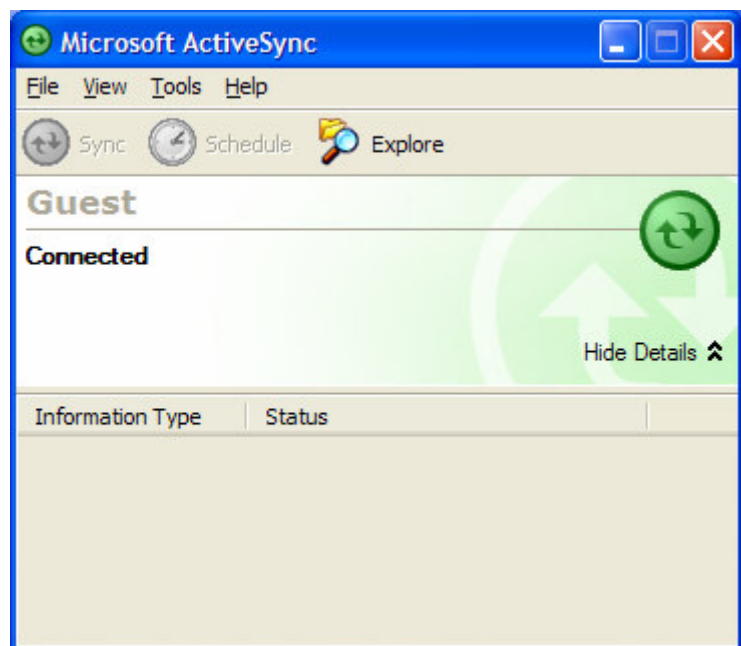


### **Step 3**

Open Trimble's Pathfinder Office

Select the RFIP project from the **"Select Project"** dialog box.

Click on **"OK"**.

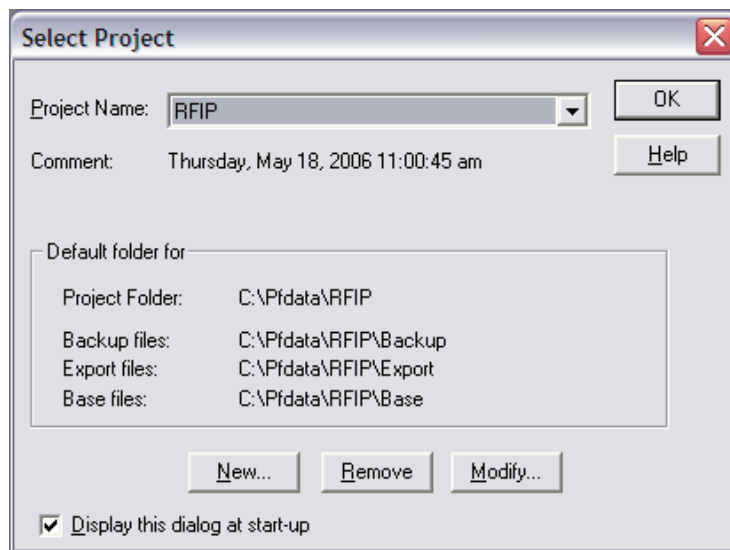


### **Step 4**

From the main Trimble Pathfinder Office menu system, select the following pull down menus:


**Utilities => Data Transfer**

This screen will appear.

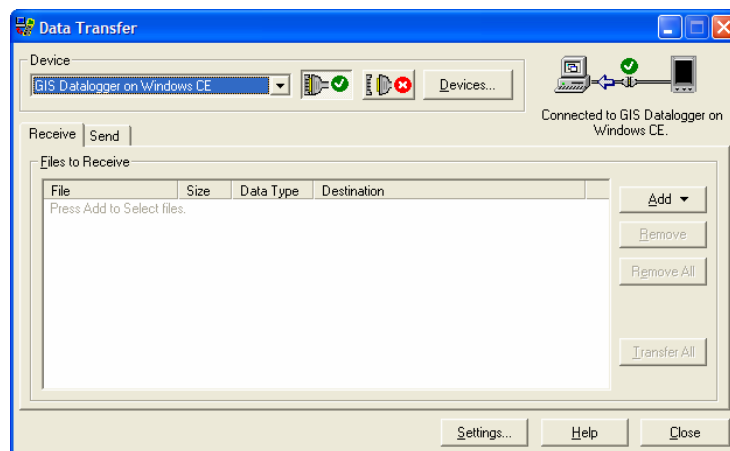


### **Step 5**

Click on the **"Send"** tab.

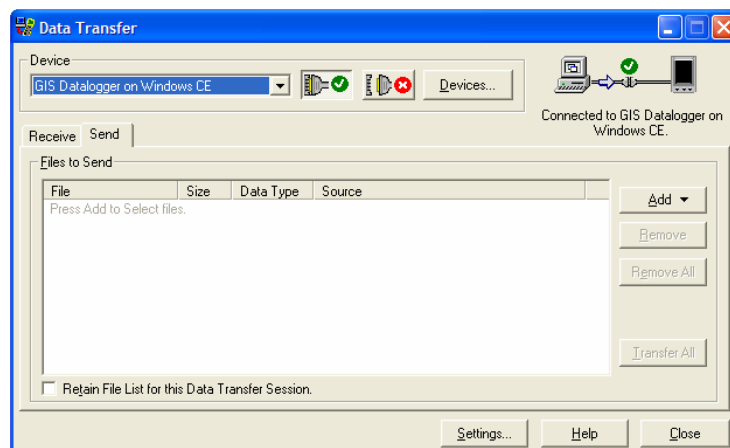

### **Step 6**

Then click on the **"Add"** Button and select **"Data Dictionary"**. This dialog box will appear.

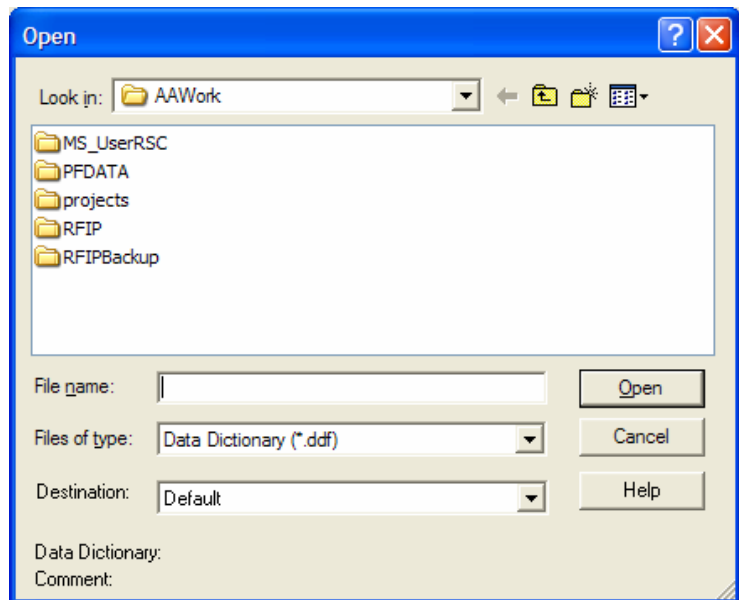


### **Step 7**

Navigate to the following folder where we stored the new data dictionary.


**C:\AAWork\PFDATA\RFIP**

The file should appear as shown here.

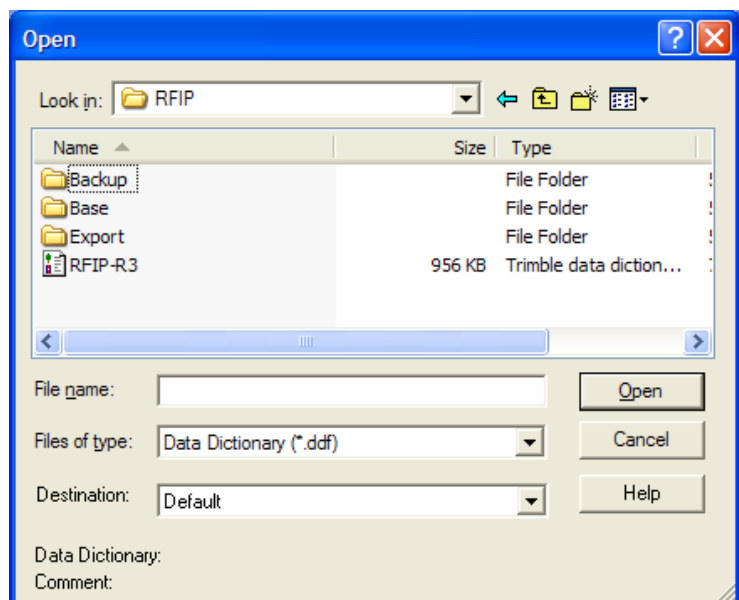


### **Step 8**

Highlight the **RFIP-R3** data dictionary as shown here.

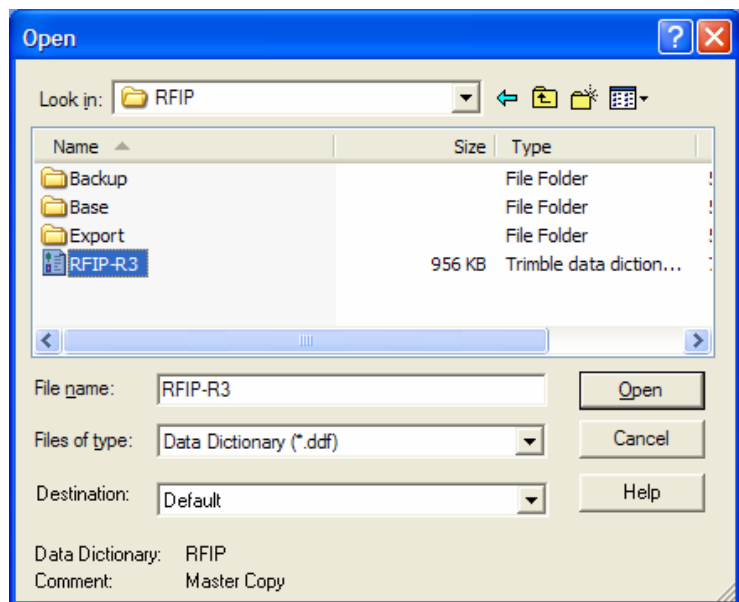


### **Step 9**

Then click on **"Open"** and this screen will appear.

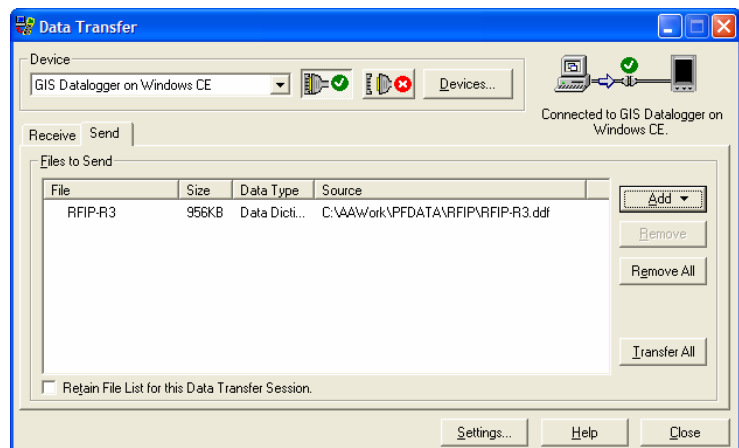


### **Step 10**

Then click on the **"Transfer All"** button.

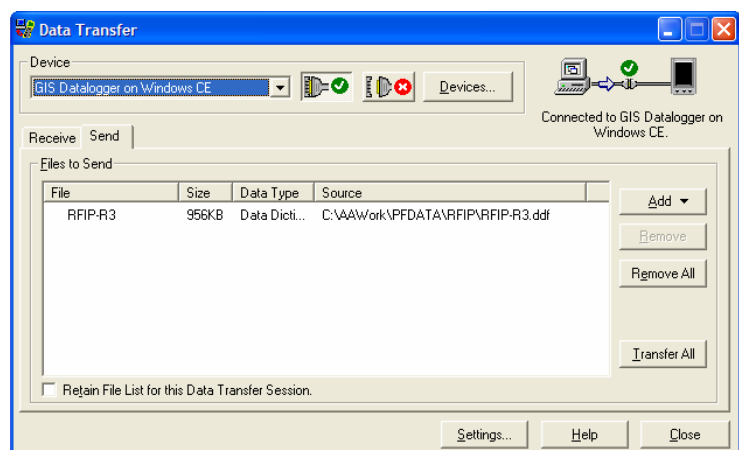


### **Step 11**

While the file is being sent, you will see this message box.

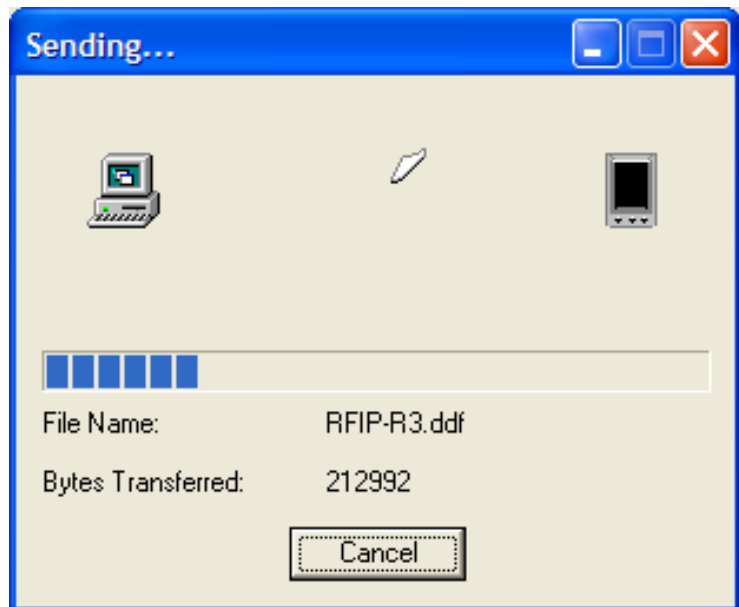


### **Step 12**

Click on "**Close**" in this "Transfer Completed" dialog box.

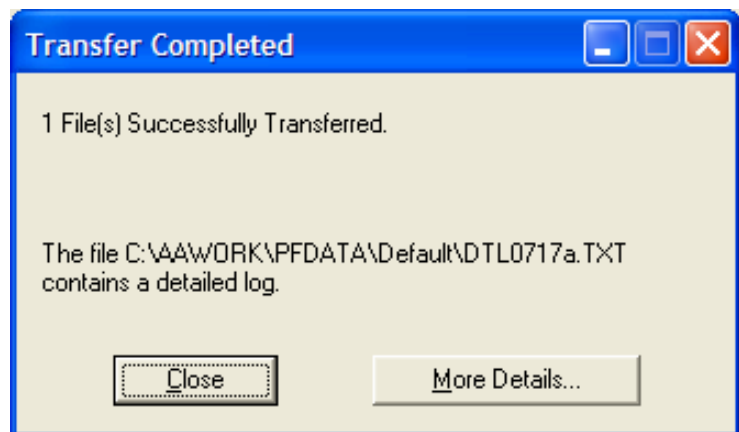

### **Step 13**

Then open "**TerraSync**" on your Geo XH Data Logger.

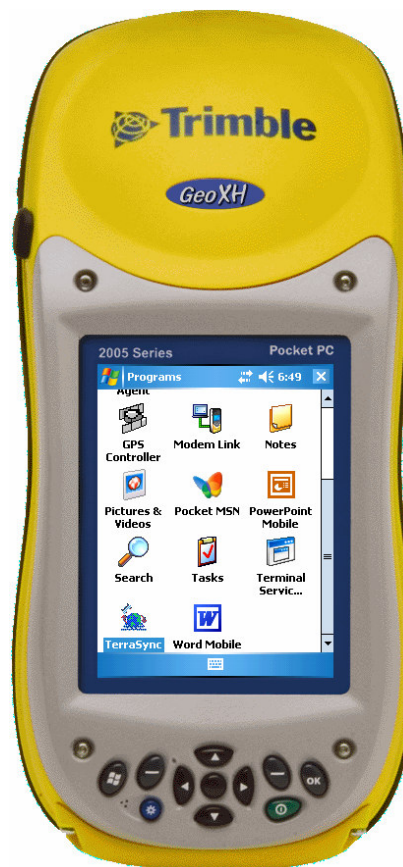

### **Step 14**

Go to the "**Data**" section.



### **Step 15**

Go to the "**Dictionary Name**" pull down menu and select the "**RFIP-R3**" Data Dictionary that you just transferred into the data logger.



### **Step 16**

Then we need you to remove all other existing data dictionaries except "Generic" and "Seaview". These are to be retained as they are in the training program.

Again, from the "**Data**" section under the sub menu pull down, select "**File Manager**" as shown.





### **Step 17**

From the field "**Choose File Type**" open the pull down menu called "**Dictionaries**"



### **Step 18**

Highlight "**RFIP-R2**"





### **Step 19**

Then click on the “**Options**” button and select “**Delete**”.



### **Step 20**


Now we will enable the data loggers “**Repeat Function**” for the dialog boxes.

Go into a existing or new “**File**” in TerraSync as shown in this screen and select the “**Options**” pull down button and click on the “**Repeat**” item.



## **Step 21**

Click on the “**Options**” button again to make sure the “**Repeat**” button has a check mark next to it.

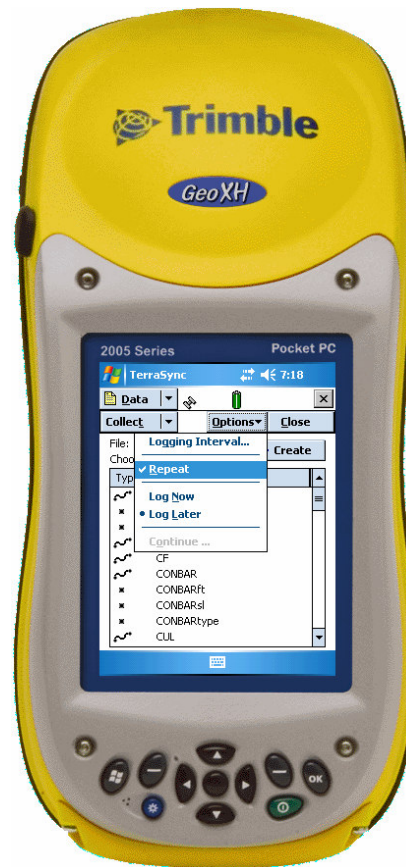

## "RFIPConfig-R2" Configuration File Install - Trimble Geo XH

Next we will continue and update the configuration file on the data logger. This is a file named "**RFIPConfig-R2.tcf**". This file change is critical to make sure we have everybody collecting data to the same standards statewide.


### **Step 22**

Save your new "**RFIPConfig-R2.tcf**" configuration file onto your computer in the following directory:

**C:\AAWork\PFDATA\RFIP**


as shown in this screen.

You will get this file via email or the RFIP Website.

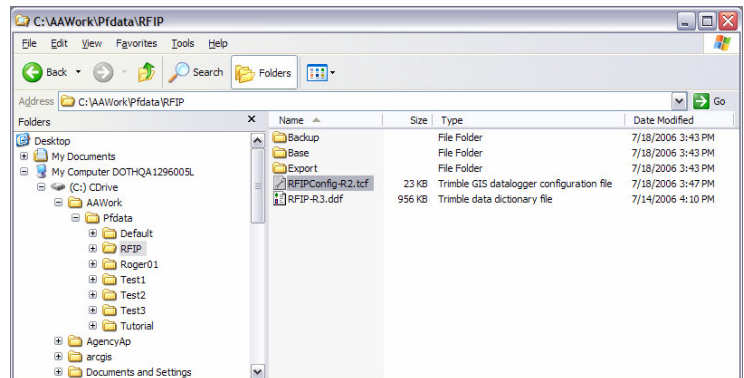

### **Step 23**

Connect your data logger to office PC using ActiveSync.

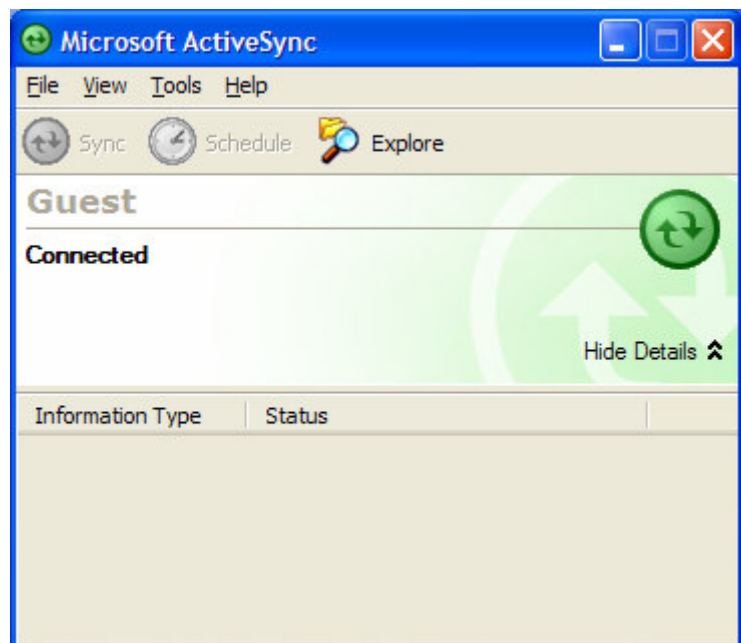


## **Step 24**

Open Trimble's Pathfinder Office

Select the "**RFIP**" project from the "**Select Project**" dialog box.

Click on "**OK**".

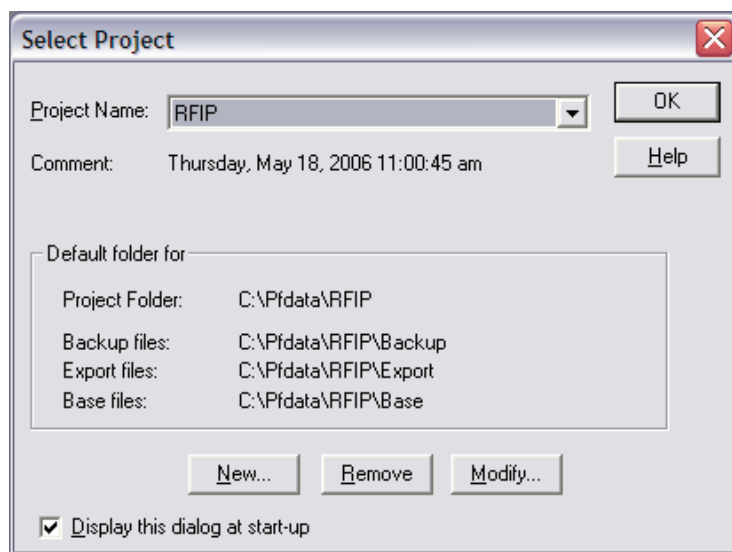


## **Step 25**

From the main Trimble Pathfinder Office menu system, select the following pull down menus:


**Utilities => Data Transfer**

This screen will appear. Connect to your data logger.

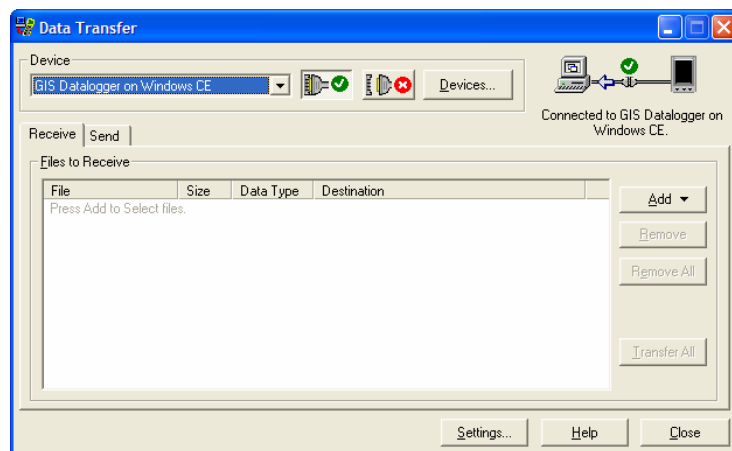

## **Step 26**

Click on the "**Send**" tab.

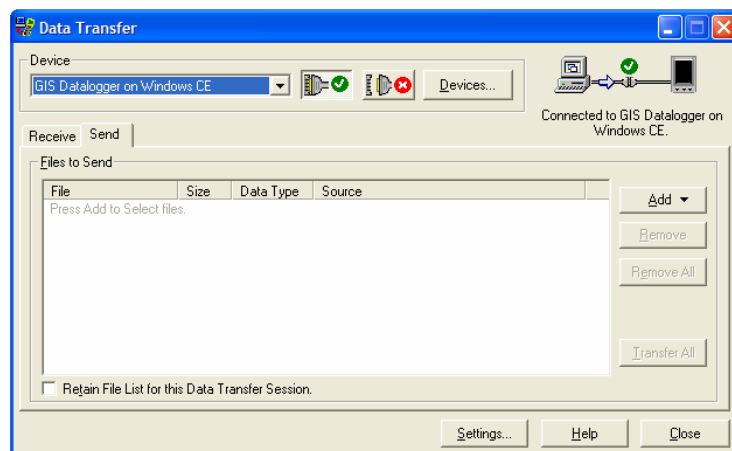


### **Step 27**

Then click on the **"Add"** Button and select **"Configuration"**. This dialog box will appear. You may have to browse to the

**C:\AAWork\PFDATA\RFIP**

directory.


Highlight the **RFIPConfig-R2.tcf** file and click on **"Open"**.

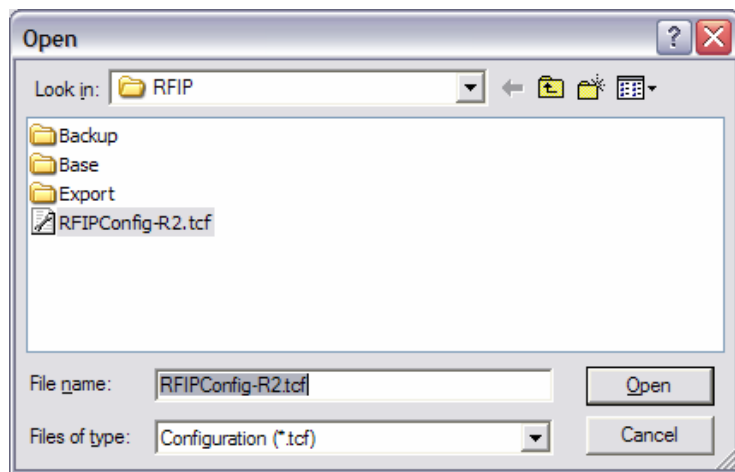

### **Step 28**

The file will then be added to the **"Files to Send"** list.


Click on the **"Add"** button.

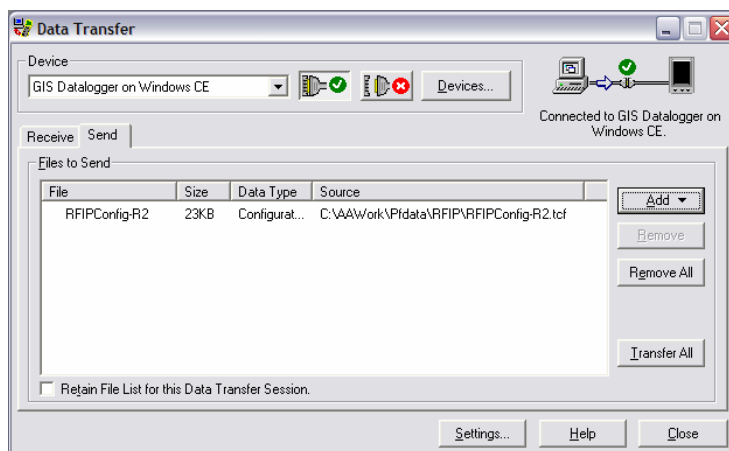

### **Step 29**

After clicking on the **"Add"** button above, the file will transfer and this box will appear.

Click on the **"Close"** button.

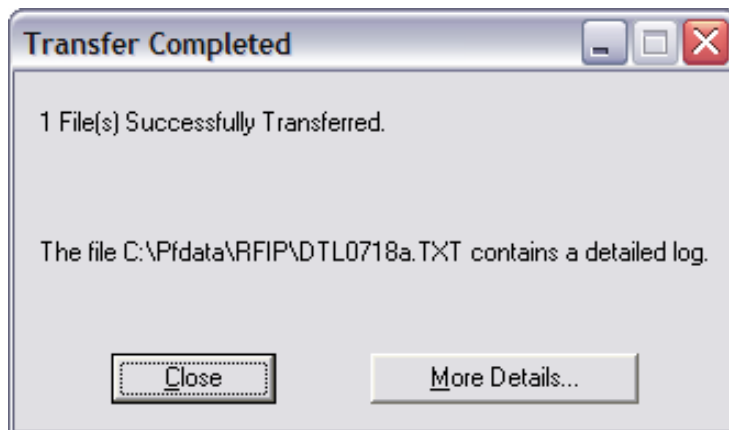

### **Step 30**

After transferring the **RFIPConfig-R2.tcf** file to the data logger, we need to **"Load"** the configuration.

Select the **"Setup"** menu as shown here.



### **Step 31**

Click on the **"Change"** button and then the **"RFIPConfig-R2"** configuration.





### **Step 32**

Then click on the **"Load"** button and this box will appear.

Click on **"Yes"**.



### **Step 33**

The Current Configuration should now be **"Based Upon: RFIPConfig-R2"** as shown on your logger and here.

Your done!

